

SYMMONS® Laundry-Mate™

Automatic Washing Machine Valve W-400, W-500-B Installation Instructions



Model W-500-B

Model Numbers

- W-400 Valve assembly



- W-500-B Valve assembly with enclosure



☎ Need Help?


Contact Symmons customer service at
(800) 796-6667, (781) 848-2250
Email: customerservice@symmons.com
Monday - Friday 7:30 am - 7:00 pm EST

💻 Please check Symmons website for technical help,
the latest product information and warranty policy at
www.symmons.com/service

For California Residents

WARNING: This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.


Dimensions Laundry-Mate Automatic Washing Machine Valve, W-500-B

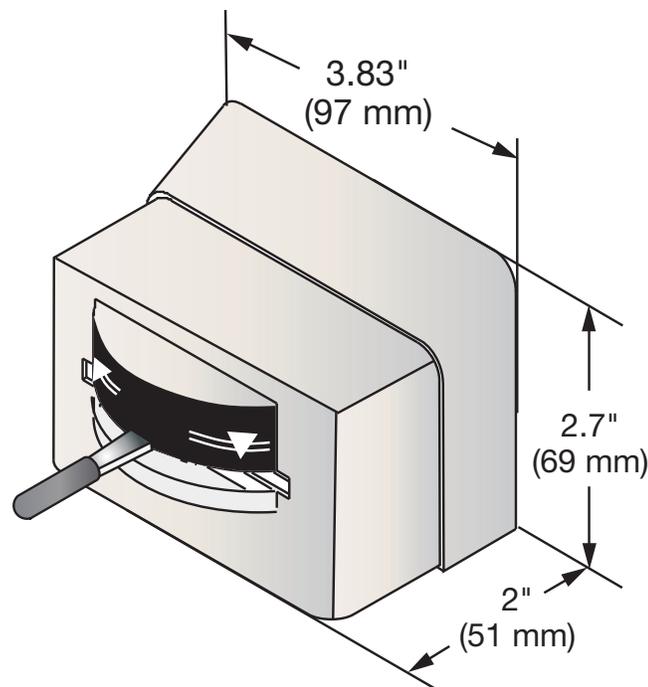

Installation Laundry-Mate Automatic Washing Machine Valve, W-500-B


Operation

Single lever handle to manually control both hot and cold water supply to machine.

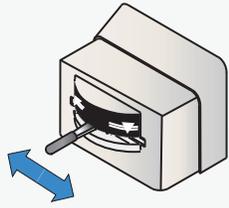


Switch water supply off after use to prevent bursting supply hoses and protect machine solenoid valves.

6 Enclosure, W-500-B model only

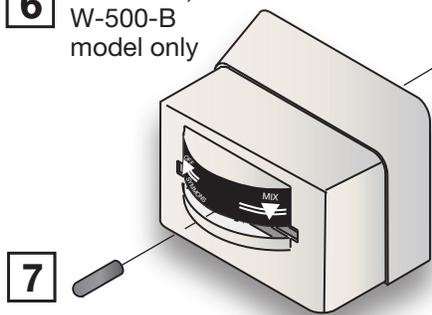

7

4 handle lever assembly

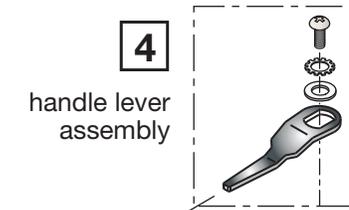

2-5/16"
(59 mm)

2

Note: wood screws not included

3

5

Washing machine hoses and washers (not included)

1

1/2 inch copper tubing (not included)

HOT supply

COLD supply

- Step 1 Sweat union ells to 1/2 inch copper tubing
- Step 2 Screw union ells to wall
- Step 3 Mount valve to wall
- Step 4 Attach handle lever to valve

- Step 5 Attach water supply hoses from washing machine to valve
- Step 6 Snap enclosure onto valve (model W-500-B only)
- Step 7 Slide handle sleeve over end of lever